


Using

1. If set is card or password to open the door, read the added card to open the door or input 4 digits password(keep 5s to touch next digit) and press # to open the door.
2. If set is card and password to open the door, read the added card and input 4 digits password(touch time delay is 5s), then press # to open the door.
3. If set is card only, please to read the added card to open the door.
4. Reset the program code back to 66688
 - 1) Input **** , press # to confirm, when heart 1 short sound and 1 long sound means successfully set.
 - 2) Power off, connect foot 2 and foot 3 of RST1 jumper cap, and power on, the program code be back to 66688. Then connect foot 1 and foot 2 of RST1 jumper cap, sound 1 time, it back to normal working status.

Cable connection:

1. Wiring diagram

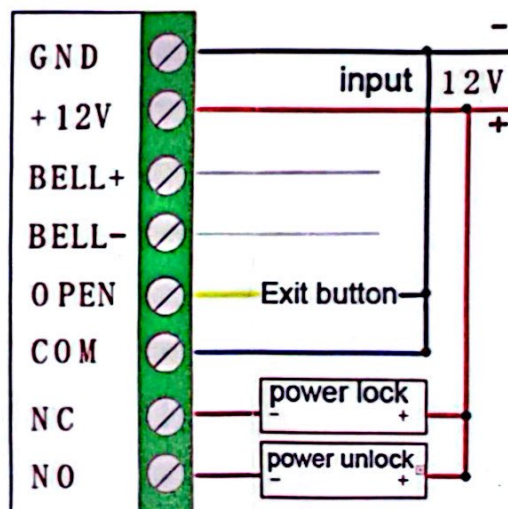

2. Wiring commentary

Color	Mark	Function
black	GND	Power input -
red	+12V	Power input +
gray	BELL+	Bell +
white	BELL-	Bell -
yellow	OPEN	Exit button
purple	NO	Relay NO
blue	COM	Relay COM
brown	NC	Relay NC

Note:

When do cable connection, please refer **Mark** before cable Color.